




Automatic Lattice Blowout Kit

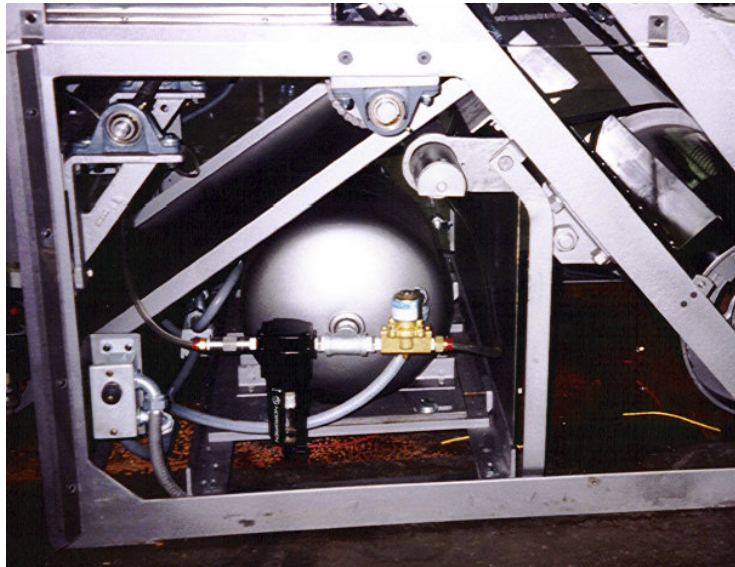

Part # 57134 Automatic Lattice Blowout Kit

The Automatic Lattice Blow Out Kit provides:

- Automatic Blow Out of the Lattice Mechanism at Preset Intervals
- Manual Blow Out of the Lattice Mechanism at the Push of a Button

The Automatic Lattice Blow Out Kit will keep the lattice **clean** and **free of crumbs**, by automatically blowing out the mechanism on preset intervals throughout the production run.

Primary components of the kit include a control panel, solenoid valve, air tank, and air manifold bracket.

The control panel incorporates two timers, one timer to activate the intervals between air blasts, the other to time the length of the blast.

Installation is **quick** and **easy**! The unit may be wired into the slicer control panel, or simply plugged into an auxiliary 110 volt outlet. This kit comes complete with installation instructions and diagrams.

We are s/l/i/c/e/d bread!



Bettendorf Stanford, Inc.

PO Box 790 Salem, IL 62881 Ph:800-548-2253 Ph:618-548-3555 Fax 618-548-3557
e-mail: sales@bettendorfstanford.com Website: www.bettendorfstanford.com