




LATTICE AIR BLAST

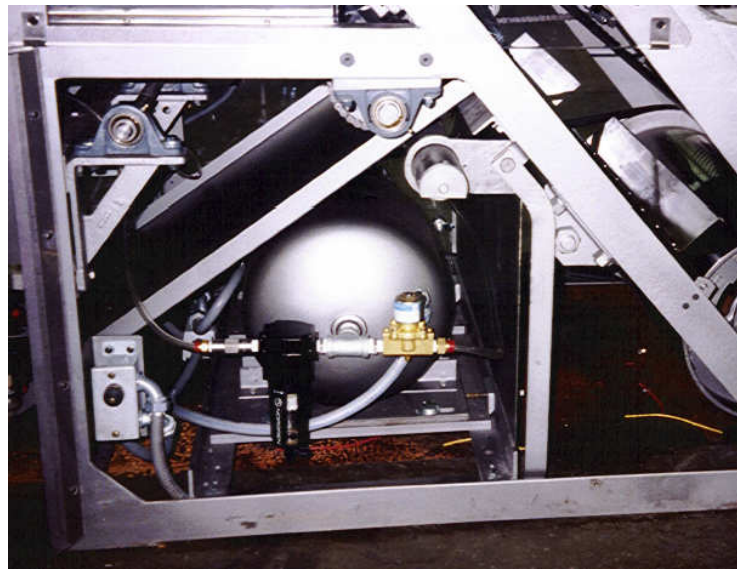

Part # 7601 Lattice Air blast

When the lattice blow out system is activated, the lattice air blast gives a sudden large burst of air through both the upper and lower lattice. This single large blast of air dislodges a greater amount of build up than normally allowed by the standard blow out system. It then allows for the steady blow of line pressure air to continue to blow out the lattices until the system is deactivated.

We are s/l/i/c/e/d bread!



Bettendorf Stanford, Inc.

PO Box 790 Salem, IL 62881 Ph:800-548-2253 Ph:618-548-3555 Fax 618-548-3557

e-mail: sales@bettendorfstanford.com

Website: www.bettendorfstanford.com